


SHIRT SLEEVE WITH CUFF


1. Turn under seam allowance on unnotched edges of over and underlaps.

Sew notched edges of laps to sleeve opening, right side of laps facing wrong side of sleeve.

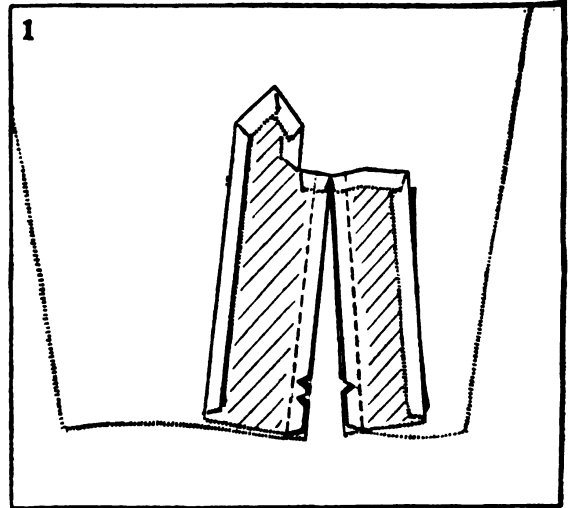

2. Fold underlap through center; then turn to right side of sleeve and stitch, covering raw edges. Turn overlap to right side of sleeve, fold on line indicated and stitch to position.

For cuff—Face cuff, joining in thin interlining, which may be made of percaline.

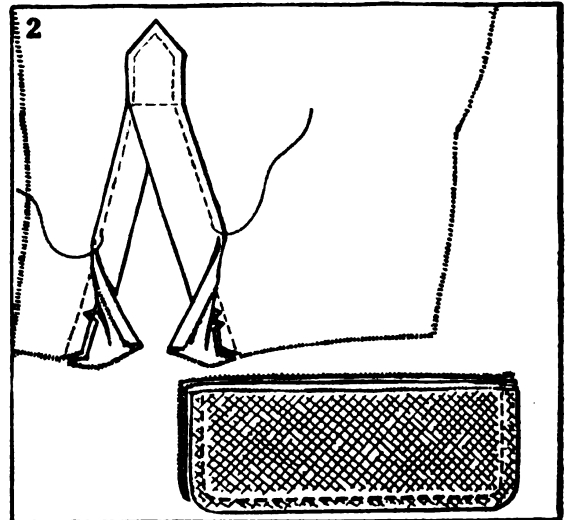

3. Join sleeve seam and gather or pleat lower edge of sleeve to fit cuff.

Turn cuff right side out and finish outer edge with a row of stitching.

Turn in seam allowance on upper edges of cuff and sew to lower edge of sleeve with 2 rows of stitching.

Finish cuff and sleeve opening with buttons and buttonholes.

